


## Daily maintenance EW159T:

- Only discharge the battery to 80% maximum (Electrolyte level 1130 SG)
- Connect the battery to the charger, switch on charger and charging should start automatically
- Do not disconnect the battery until charge cycle has finished
- When charge cycle has completed make sure charger is switched off before disconnecting the DC plug

## Weekly maintenance EW159T:

- Check the level of the Electrolyte on the battery  
Only top up battery with demineralised water
- Only top up after charge cycle has completed
- The battery should only need topping up every 2 weeks
- If required more frequently please contact the manufacturer
- Check for signs of corrosion on cables or bolts clean as required
- The battery tops should be kept clean and dry  
No smoking or naked flames to be in the area of charging

Only top up the battery after the charging cycle has been completed to avoid electrolyte spilling from the battery!  
No smoking or naked flames to be in the area of charging.

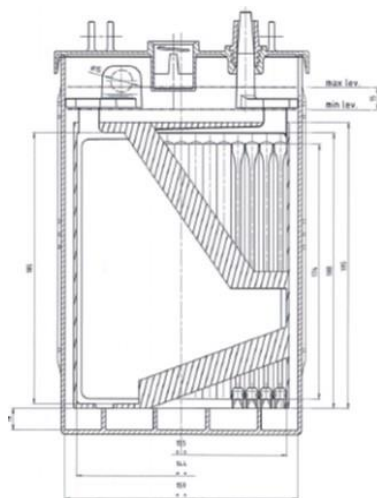

Green is  
maximum  
level

Red is  
minimum  
level



Always follow the  
manufactures  
instructions



No smoking or  
naked flames



Electrical Hazard



Danger risk of  
explosion



Always wear the  
correct PPE



Avoid contact of  
skin and eyes



Room must be well  
ventilated



Pb  
All disused batteries  
must be recycled